


Sockets for FB U3 and U6 Slide in type

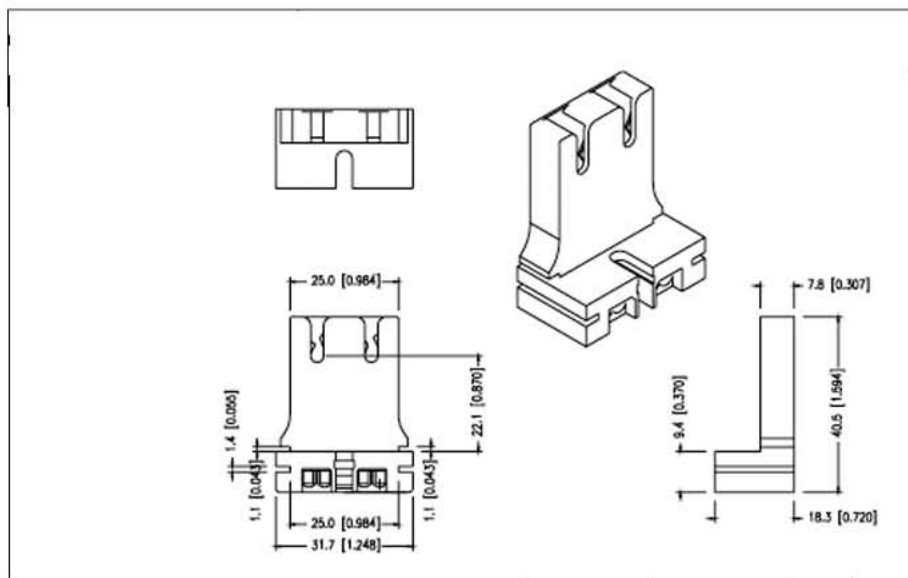

SOFBRS-SL

Program start (Rapid Start) fluorescent socket for U3 or U6 Slide in. Four contact holes in the bottom.



SOFBIS-SL

Shunted (Instant Start) fluorescent socket for U3 or U6 Slide in. Two contact holes on one side of the socket.

